

## Output signal confirmation

The output signal can be confirmed.

The [1] Status reference mode and the [2] Test output mode are available. Press the mode changeover icon to change the screen.

## [1]Status reference mode

The current output status can be confirmed.



Indicates that the output signal is ON.



Indicates that the output signal is OFF.

## [2]Test output mode

The signal for which the icon is pressed will be output as a test.



Indicates that the output signal is ON.



Indicates that the output signal is OFF.

[Memo] Output ON/OFF display might be concealed by the error message's giving priority according to the kind of the output and other conditions and being displayed.







